


HT Keyfob Transmitter Basic Evaluation Kit

Quick Start Reference

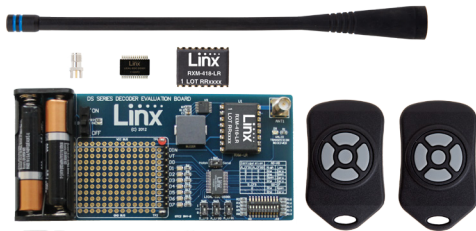


1 Remove Contents




Remove the boards, antennas, batteries and connectors.

2 Set Up Board

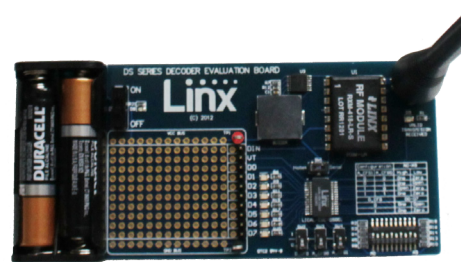

Install batteries and an antenna on the board.

3 Power On

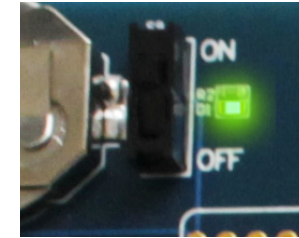

Turn on the power switch.

4 Activate



Push S0 to activate buzzer and push S1 to turn on the LED.

Changing the Transmitter Address




1 Open the Keyfob




Open the fob by prying open the seams with a fingernail.

2 Cut Traces

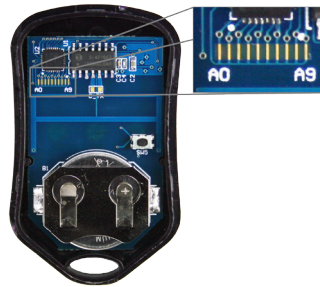

Cut the address traces (A0 through A9) as desired to set the address. A solid trace is connected to ground.

3 Set DIP Switches

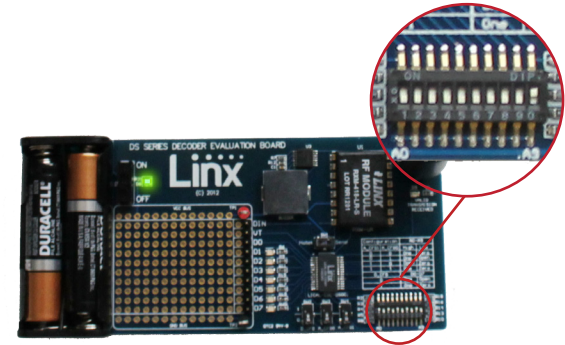

Set the DIP switches on the board to match the traces on the keyfob. All traces that were cut should have the corresponding switch set to OFF (down).

4 Activate



Push S0 to activate buzzer and push S1 to turn on the LED.