



**BNC-TNC-MINI-UHF 3 PC-CRIMP  
ASSEMBLY INSTRUCTIONS**

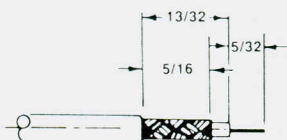


1. TRIM CABLE AS SHOWN, TAKING CARE NOT TO NICK THE INNER CONDUCTOR OR BRAID

2. SLIP CRIMP SLEEVE OVER CABLE. PLACE INNER CONDUCTOR INTO CONTACT. NOTE THAT THE END OF CONTACT AND INNER DIELECTRIC MUST BE BUTTING AND SQUARE. CRIMP WITH APPROPRIATE TOOLING.

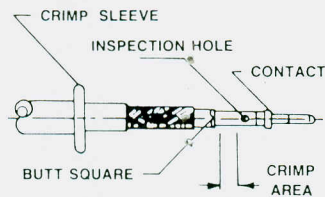

3. FLAIR OUTER BRAID, AND GENTLY BUT FIRMLY PUSH THE CONTACT INTO THE CONNECTOR HOUSING UNTIL A GENTLE SNAP IS FELT, INDICATING THE CONTACT IS IN PLACE SLIP THE CRIMP SLEEVE IN PLACE, BUTTING THE FLANGE AGAINST THE CONNECTOR BODY, AND CRIMP WITH APPROPRIATE TOOLING.

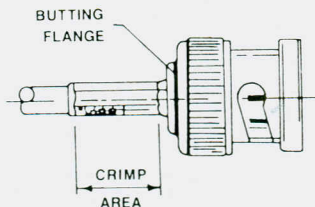

| SPECIFICATION |      |   |
|---------------|------|---|
| HEX SIZE      |      | CABLE SIZE  |
| MM            | INCH |   |
| 1.72          | .068 | Center conductor  |
| 2.5           | .100 | Center conductor  |
| 5.4           | .213 | 55, 58, 141, 142<br>223, 303, 400                         |
| 6.48          | .255 | 59, 61, 140, 210,<br>Belden 8279                          |
| 8.2           | .324 | 5, 6, 21, 143, 212, 222, 304<br>Belden 8281 9231 and 9141 |

**AIM ELECTRONICS**  
3103 NORTH ANDREWS AVE. EXTN.  
POMPANO BEACH, FL.33064  
MADE IN TAIWAN

